





What to do if...  
What to do if...

	A tire punctures	P. 726	If you have a flat tire
	The engine does not start	P. 734	If the engine will not start
		P. 114	Engine immobilizer system
		P. 742	If the battery is discharged
	The shift lever cannot be moved out	P. 736	If the shift lever cannot be shifted from "P"
	The engine coolant temperature gauge enters the red zone	P. 745	If your vehicle overheats
	Steam can be seen coming from under the hood		
	The key is lost	P. 35	If you lose your keys
	The battery runs out	P. 742	If the battery is discharged
	The doors cannot be locked	P. 53	Doors
	The horn begins to sound	P. 116	Alarm
	The vehicle is stuck in mud or sand	P. 748	If the vehicle becomes stuck



A warning light or indicator light comes on

P. 713

If a warning light turns on or a warning buzzer sounds...



nWarning lights



Brake system warning light

or



P. 713



Malfunction indicator lamp

or



P. 714



"ABS" warning light

or



P. 714



Driver's seat belt reminder light

P. 716



Front passenger's seat belt reminder light

P. 716



Brake system warning light

P. 714



Master warning light

P. 716



Low fuel level warning light

P. 716



Electric power steering system warning light

P. 714



SRS warning light

P. 714



Slip indicator

P. 714








Open door warning light

P. 716



Tire pressure warning light

P. 716

	Charging system warning light	P. 713
	Cruise control indicator*	P. 714
	Automatic High Beam indicator light*	P. 714
	Pre-collision system warning light*	P. 714
	"AFS OFF" indicator*	P. 714

\*: The light flashes to indicate a malfunction.